 




Installation Tips



Run Fence to end, past the Arm. Zip Tie Fence to Arm. Cut the fence 4 squares past the Arm.

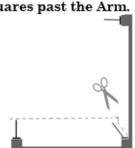


Zip Tie first section to the Arm. Attach second side with Ties and continue installing the fence.

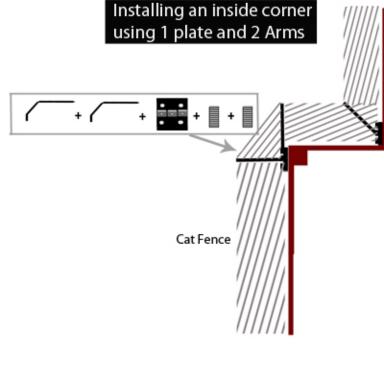


Outward Opening Gate Installation

Inward Opening Gate Installation

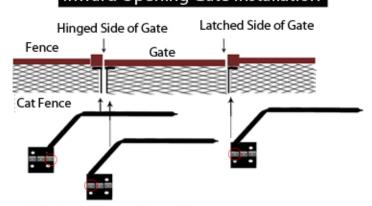

Note the collar used for each Arm above.

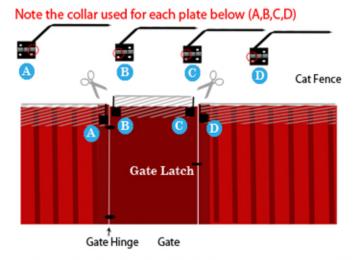

Set Arms "B" and "C" above Arms "A" and "D" so that when the gate opens outward the Arms on the gate ("B" and "C") will pass ABOVE the fence material and Arms ("A" and "D") on either side of the gate. Test opening the gate before you add the Fence material to be sure that the Arms do not hit each other, preventing the gate from opening. Cut the fence between Arms "A" and "B" as well as "C" and "D".